2011-2013 TOURING

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

NOTICE:

Fuelpak is intended for racing use only, and is not legal for sale or use in California on pollution-controlled vehicles.

TOOLS NEEDED

- #3 Straight Blade Screwdriver
- #1 Phillips Screwdriver - Less than 1 hour



INTRODUCTION: Congratulations on your purchase of the Fuelpak Fuel Management System for fuel injected Harley-Davidson[®] motorcycles. Please take the time to read the entire instruction manual before attempting to install. DO NOT adjust the Fuelpak until you have thoroughly read the instruction manual and the unit is fully installed. If you have questions, please call (562) 921-0071.

SUMMARY: To achieve the optimum performance from your application, it is recommended that you install a high performance air filter in conjunction with this unit. The Fuelpak will be installed between the factory wiring harness and the Electronic Control Unit (ECU). The Fuelpak will be mounted on top of the ECM using the supplied velcro.

PLEASE NOTE: FUELPAK USE REQUIRES A HIGH PERFORMANCE AIR FILTER.



 Remove seat, exposing factory computer (ECU). disconnect factory wiring by pressing lock and pushing lever back.



 Remove ECU by pushing tab and sliding the ECU to the right as you lift.



3. Cut and remove the left ECU hold down to allow the ECU to slide over.



- Gently align the pins of the Fuelpak connector with the ECU and press the connector on the ECU. Be sure the single large pin is aligned with the single large socket before pressing Fuelpak connector into the ECU. Make sure all four tabs fully latch. (Fuelpak connector Patent Pending # 29 295831)
- Connect factory wiring to Fuelpak connector and pull lever to locked location. Be sure the lock snaps into position.




 Attach Fuelpak to the top of the ECU by using the supplied Velcro.

FUEL INJECTION MANAGEMENT SYSTEM



6. Reinstall ECU.

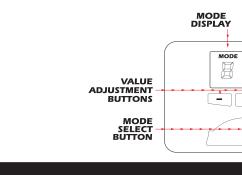

1. Your Fuelpak has been preloaded with the map below. This map is a good base map for aftermarket pipes with a high-flow air cleaner. To learn more about this map, or to get a precision, Dyno tuned map, specific to your application, visit www.fuelpakfi.com on the internet or call tech support at (562) 921-0071. If you do not wish to change these settings, your installation is done and you can proceed to step 7.

VALUE DISPLAY

VALUE

日

÷

- 2. Remove Fuelpak snap cover by sliding tabs over the unit.
- Turn on main power and handlebar switches, but do not start engine. Fuelpak display should activate, if not, turn power off and verify the connectors are fully seated.
- 4. Press the mode button once to move to mode 1, press the value (+) or the value (-) buttons to input the correct value as indicated in your Setting Value. After entering your first value, press the mode select button to move to mode 2 and enter the value. Continue until you have entered the value for all mode positions. Each time the value (+) is pressed, the value increases by one number. Each time the value (-) is pressed, the value decreases by one number. (Please refer to the "How It Works" section directly above if you have questions about this step.
- 5. Turn power off, wait one second then turn power back on. Verify all modes then turn power off.
- 6. Reinstall Fuelpak snap cover.
- 7. Reinstall seat. Be sure to align the seat with the tab on the frame. Tighten all bolts.
- 8. You are now ready to ride.

Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Value	8	5	5	5	0	0	0	20	18	13	17	16	12	0	3	2	4	16
Mode	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36
Value	17	16	-2	6	9	4	2	0	10	0	0	0	2	7	10	15	9	0
Mode	37	38	39	40	41	42	43	44	45	46	47	48	49					
Value	12	15	17	21	26	32	40	55	20	25	25	45	33					

- IN THE EVENT OF A MALFUNCTION, PLEASE CHECK THE FOLLOWING
- Turn off main and handlebar switches then verify all4.connectors are fully seated.5.Be sure setting values are correct for your application.
- 3. With the engine running, verify the value in mode 52

changes when you twist the throttle

- 4. Check harness for cuts, scrapes or abrasions.
- 5. Make sure the battery is fully charged and the
- charging system is operating correctly.
- Call technical support at (562) 921-0071

WARRANTY INFORMATION

WARRANTY: Your Fuelpak unit is warranted against defects in materials and workmanship for the period of 90 days from the original retail purchase. In the event of an alleged defect in material or workmanship, Fuelpak's responsibility is strictly limited to repair or replace the defective product. Fuelpak shall not be responsible for (a) labor, transportation, or other incidental charges; (b) consequential or other damages incurred by use of any product. Fuelpak offers no other warranty beyond this limited warranty. This limited warranty does not apply to products which have been (a) modified or altered in any way; (b) subjected to adverse conditions, such as misuse, neglect, accident, improper installation or adjustment, contaminants, corrosion, or faulty repair; or (c) used in applications other than those recommended by Fuelpak. To initiate a warranty process, the consumer must first call technical support to receive a return authorization number. The product must be returned to Fuelpak complete with a dated receipt and a return authorization number.

Fuelpak Attn: Warranty Claims 13861 Rosecrans Avenue Santa Fe Springs, CA 90670 (562) 921-0071

HOW IT WORKS

ENTERING VALUES