

Items Supplied >

1 – MUFFLER ASSEMBLY
1 – CLAMP, 27-61MSC

Application >

HARLEY:
DYNA SWITCHBACK

12-13


Instruction Manual >

6209

Page 1 of 1

Read all instructions carefully and completely before installing your new slip-on muffler

1. Remove the right side saddlebag carefully.
2. Remove and save the mounting hardware securing the stock muffler to the brackets. Loosen the muffler clamp then pull the muffler free from the collector. The stock clamp will not be reused.
3. Slide the supplied 27-61MSC clamp over the slip-on muffler and position it as shown in Figure 1 with the hex head facing inward and towards the ground.
4. Slide the muffler onto the collector until the mounting holes align. Fasten the muffler using the stock mounting hardware in the same manner as stock but **do not tighten**.
5. Verify that the gap where the muffler meets the stock heatshield is similar to the gap the stock muffler allotted.
6. Check all clearances and alignments then tighten the mounting bolts to factory specifications. Fully tighten the muffler clamp (NOTE: If the muffler clamp is slid past the two slots, the clamp will not tighten properly).
7. Reinstall saddlebag carefully.

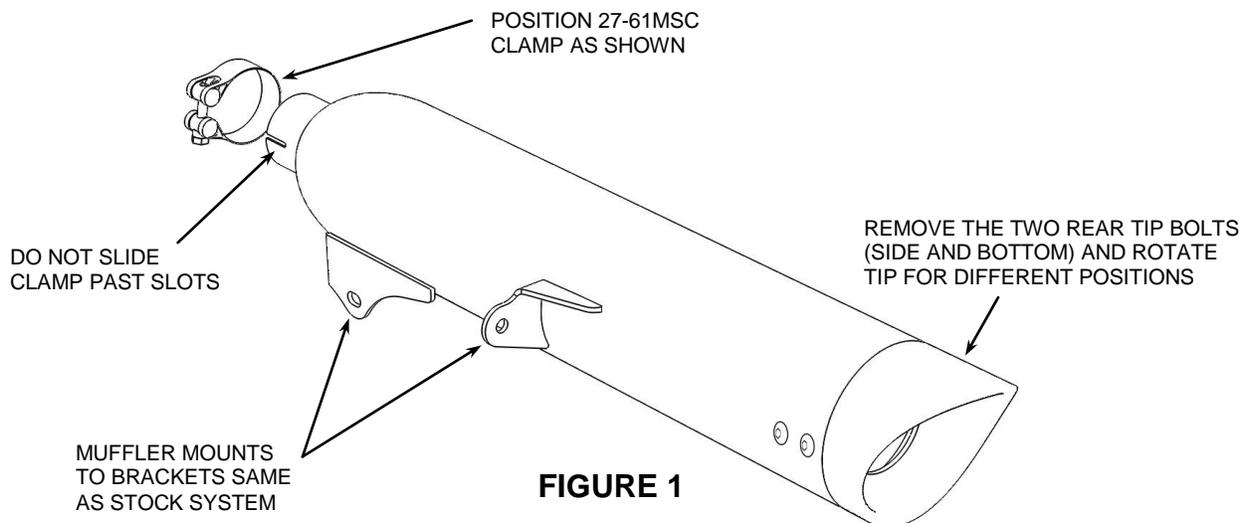

IMPORTANT: To achieve optimum performance from your new mufflers it is suggested that you install a Cobra Fi2000® Digital Fuel Processor. Visit www.fi2000r.com

Before starting your engine remove all fingerprints from chrome with a quality wax or chrome polish. Failure to do so can cause chrome discoloration.

California does not allow the use of aftermarket exhaust systems that remove original equipment catalysts, (except for racing use only) unless the Air Resources Board has issued an Executive Order for that system.

*** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**