

**Part Number:** HD-XR12-GL

**Description:** Gunfighter & Lady Saddle

**Fitment:** 2009-2010 Harley Davidson XR 1200


**Revision:** 2




Tools Required	Parts List
1/2" Socket Wrench 1/2" Open Wrench 7/16" Open or Combination Wrench 5/32" Allen Wrench	2 1/4" x 20 (SP00653) Flat Head Allen Screws 1 #P11044 Rear Pin Bracket 1 #P10634 Front Locking Pin 1 (SP00102) Flat Washer 1 (SP00287) Lock Washer

**NOTE:** We highly recommend using a removable strength thread lock product such as Loctite® on the bolts when installing your mounting bracket.

1. Start by removing the stock front and rear seats from your motorcycle. Refer to your owner's manual if necessary.
2. Remove the stock tail section by first removing the pin, using a 1/2" open wrench on the top and a 1/2" socket wrench on the bottom (*Figure 1*).
3. Next, remove the five bolts using a 7/16" open or combination wrench (*Figures 2 & 3*).
4. Remove the stock tail section.
5. Install the rear pin bracket onto the tail section and secure with the supplied flat head Allen screws, using a 5/32" Allen wrench (*Figure 4*). Use Loctite®.
6. Install the front locking pin, flat washer and lock washer using a 7/16" open wrench (*Figure 5*). Use Loctite®.
7. To install your Gunfighter & Lady saddle, simply place the rear of the saddle onto the latch pin on the rear fender. Then lower the front of the saddle onto the front latch pin and push down on the saddle until you hear it click (*Figure 6*).

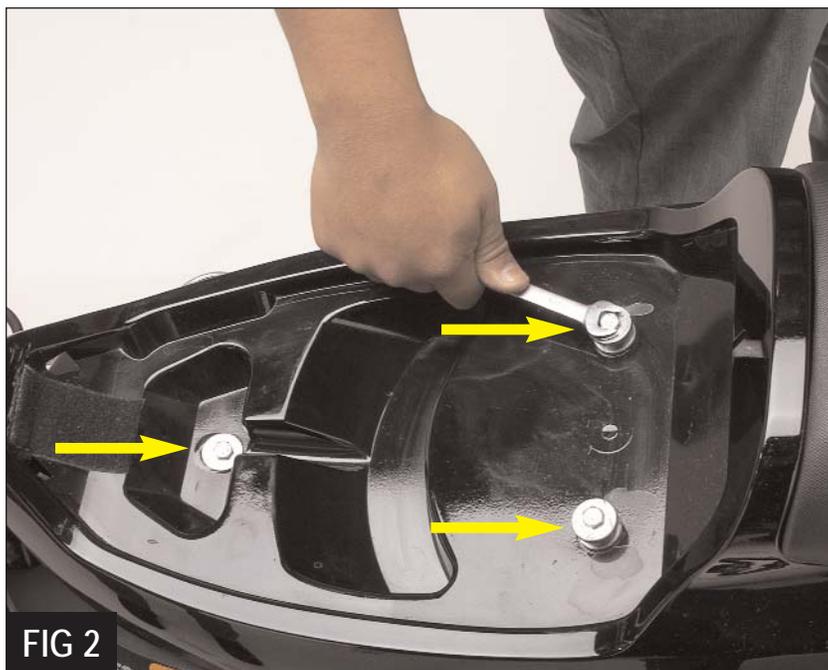

8. To remove the saddle, insert the key into the lock system, turn the key clockwise and pull it up from the front. If the key seems a bit stiff to turn, push down on the seat over the locking system, to assist the seat as the rubber grommets are new and need time to break in.

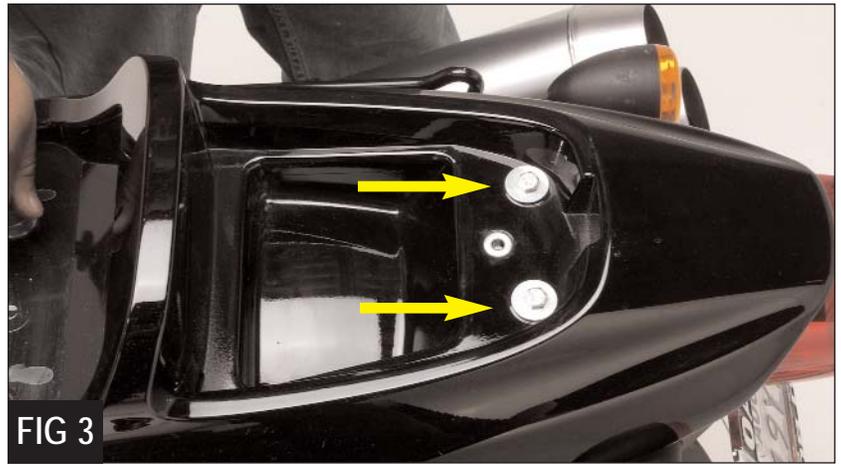

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com